




HERKULES PLUS 2x25

Instrukcja montażu
Installation instruction
Инструкция монтажа

VALCOMP

www.valcomp.pl
tel. 22 818 77 22

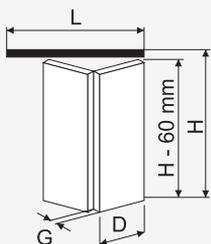

G [mm]	16	18	22	25	28	32	40
x	2	2	3	3	4	4	6

1


D ≤	600 mm	750 mm
HERKULES PLUS	2 x 25 kg 4 x 25 kg	2 x 40 kg 4 x 40 kg

2 A




$$D[\text{mm}] = \frac{L[\text{mm}] - x - 5}{2}$$

 2 B




$$D[\text{mm}] = \frac{L[\text{mm}] - 2x - 8}{4}$$

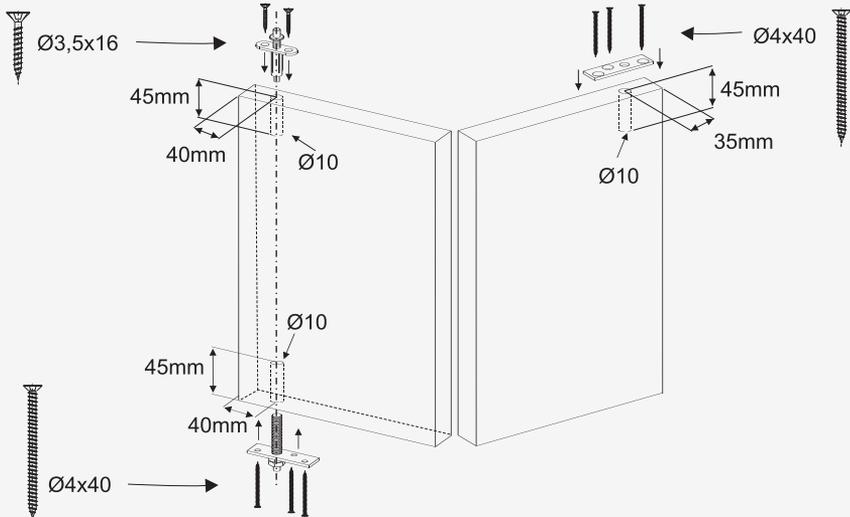


3



 4 A




4 B

 


min 22 mm




5

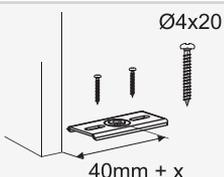


7

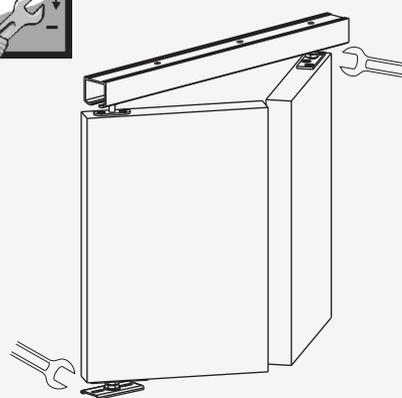

6

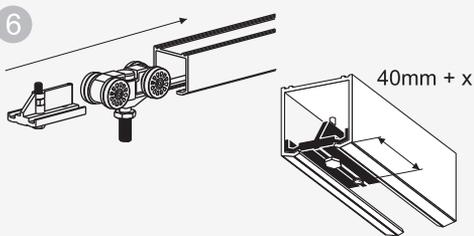

Ø4x40

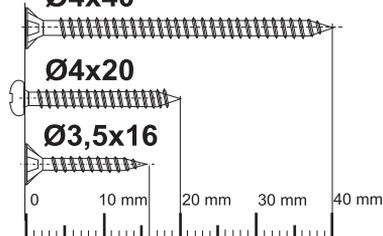

1:1




HERKULES PLUS 2x40

Instrukcja montażu
Installation instruction
Инструкция монтажа

VALCOMP

www.valcomp.pl
tel. 22 818 77 22

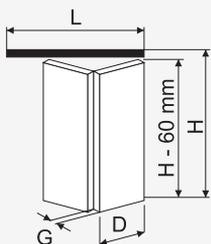

G [mm]	16	18	22	25	28	32	40
x	2	2	3	3	4	4	6

1


D ≤	600 mm	750 mm
HERKULES PLUS	2 x 25 kg 4 x 25 kg	2 x 40 kg 4 x 40 kg

2 A




$$D[\text{mm}] = \frac{L[\text{mm}] - x - 5}{2}$$

 2 B




$$D[\text{mm}] = \frac{L[\text{mm}] - 2x - 8}{4}$$

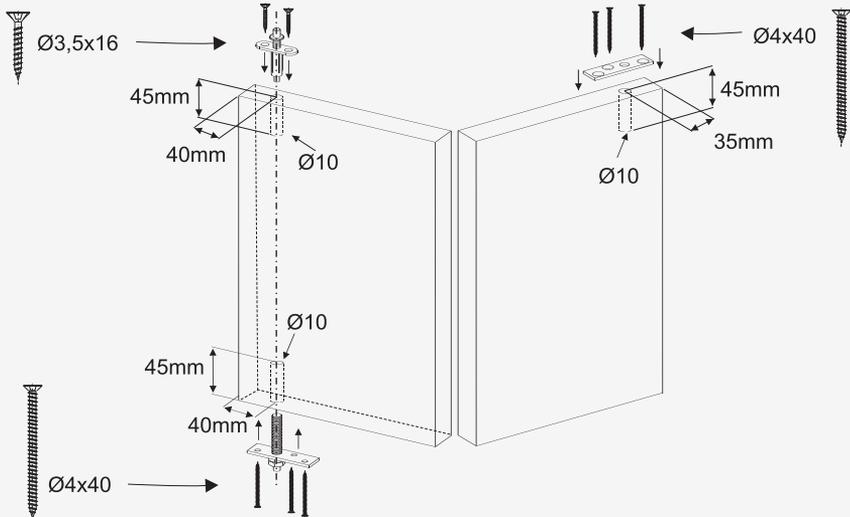



3



 
4 A




4 B

  


5

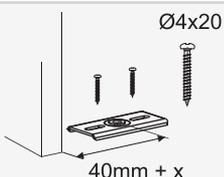


7

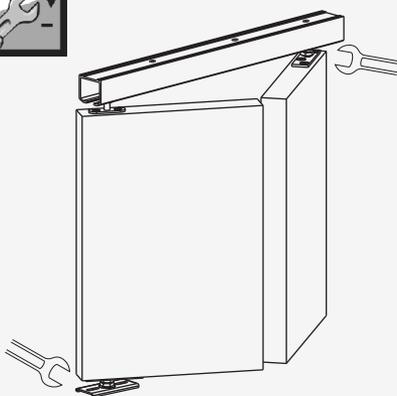

6

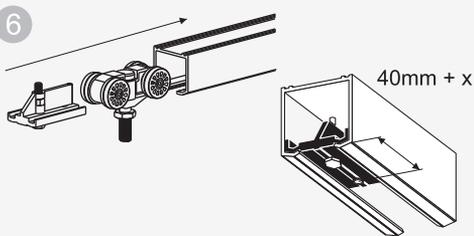

Ø4x40

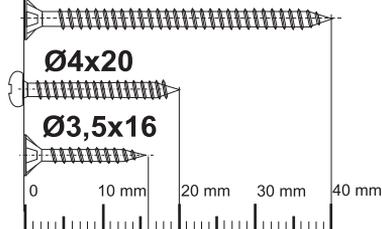

1:1